WARMER COMMERICAL KITCHEN TECHNOLOGIES INSTALLATION MANUAL

Retractable Cord Heat Lamp



Please read this manual before start to instalattion

SPECIAL NOTE: Installation and repair of this equipment should be performed byqualified persons only. Hanson Brass does not warranty any damage occurring as a result of improper installation. It is recommended that this installation manual be completely reviewed prior to installation.

WHEN REMOVING PARTS FROM THE SHIPPING CARTON, BE CAREFUL NOT TO DAMAGE THE COMPONENTS. IMPORTANT: THOROUGHLY CHECK THE BOX FOR PARTS THAT MAY BE LOCATED IN AREAS THAT CAN BE OVERLOOKED.

ELECTRICITY AND MOUNTING REQUIREMENT:

It is recommended that the Retractable Cord Warmer be mounted directly over a 4-0 junction box. If this is not possible the input power supply lines should be wired in accordance with all applicable building codes.

The supply circuit line must be as follows: 230 VAC lights- 220-240 VAC, 50/60 Hz, single phase, three wire, capable of supplying 250 watts @ 1.5 amperes.

The power supply circuit must be in compliance with all applicable building codes. It is recommended that the Retractable Cord Warmer is connected to it's own supply circuit with integral circuit breaker. The circuit breaker will act as the supply main dis-connect switch.

SAFETY INSTRUCTIONS

1-This appliance **is hot** when in use. To avoid burns, do not let bare skin touch hot surfaces. Keep combustible materials, such as drapes and other furnishings, away from appliance.

 
2-Extreme caution is necessary when any appliance is used by or near children and whenever the appliance is left unattended.

3-Always disconnect appliance before cleaning, maintaining and adjusting it. Do not operate any appliance with a damaged cord or plug if the appliance malfunctions or has been dropped / damaged. Return appliance to an authorised service facility for examination, electrical or mechanical adjustment, or repair.

4-Do not use outdoors. This appliance is not intended for wet or moist locations. Never locate appliance where it may fall into water.

5-Avoid the use of extension cords. Do not run cord under carpeting, runners, or the like. Arrange cord away from traffic area and where it will not create a trip hazard.

6-This appliance has electrical parts. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.









WARMER COMMERICAL KITCHEN TECHNOLOGIES

7-This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

8-If the supply cord is damaged, it must be replaced by the manufacturer, it's service agent or similarly qualified persons in order to avoid a hazard

Please Follow below Step for Right Assembly.

1 – Lower the switch 2 – Prepare and Open the circuit cable ends

Failure to provide a circuit meeting these minimum standards or complying with local building codes can cause a shock hazard.

- 3 Check and replace the hanger hook ,4 Connect cable with the terminal
- 5 Suspend hooks together, 6 make right tension for cord, 7 Push the plastic cover to up,
- 8 Insert infrared lamp to plug, 9 Push the I/0 switch for open the lamp.

WARNING! This unit only suitable for E27 -MAX250WATT type infrared bulb .

The lamp is excluded from the warranty.!

MAINTENANCE

ELECTRIC SHOCK HAZARD:

• Turn OFF power at fused disconnect switch/circuit breaker and allow unit to cool before performing any cleaning, adjustments, or maintenance.

• DO NOT submerge or saturate with water. Unit is not waterproof. Do not operate if unit has been submerged or saturated with water.

- This unit is not "jet-proof" construction. Do not use jet-clean spray to clean this unit.
- Use only Original Replacement Parts when service is required.

CLEANING

Clean unit daily to avoid malfunctions and maintain sanitary operation. Use non-abrasive cleaners and cloths only. Abrasive cleaners and cloths could scratch the finish of the unit, marring its appearance and making it susceptible to soil accumulation. Do not use ammonia-based or Acid based cleaners on unit.

Daily Cleaning 1. Move the I/O (on/off) Switch to the O (off) position and allow the unit to cool completely. 2. Wipe down the lamp shade with a clean, soft, waterdampened cloth. Stubborn stains can be removed with a mild, non-abrasive cleanser.

Replacing an Infrared Bulb Each standard wattage . holds one infrared bulb rated at max250 W.*23





AWARNING

